

## Washer/Dryer Pan INSTALLATION INSTRUCTIONS

Scrape and clean the floor where the pan will be placed so that it is smooth. Be sure to remove any particles that would prevent the pan from lying flat.

To cut the drain hole in the pan, locate the center of the existing drain pipe by measuring the distance from the surrounding walls. Using the sides of the pan as references, measure and mark the center of the drain hole on the pan. Using a 3 ½" hole saw, cut the drain hole out of the pan.

Remove the drain cover from the drain assembly. Apply ABS weld around the top rim of the drain lip (See Figure 1). Place the Drain Assembly through the bottom of the drain hole in the pan so that the drain lip fits tightly against the bottom of the pan. Allow drying time of 5 minutes.

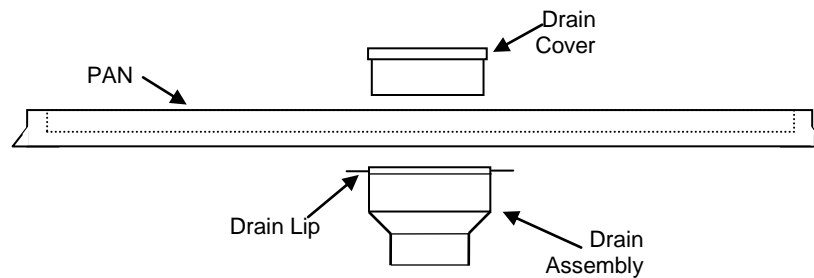


Figure 1

Dry fit the pan onto the existing drain pipe, making sure that the drain pipe is the proper length. Remove the pan and, on the bottom side, apply low solvent or latex adhesive around the edges and in the middle (See Figure 2).

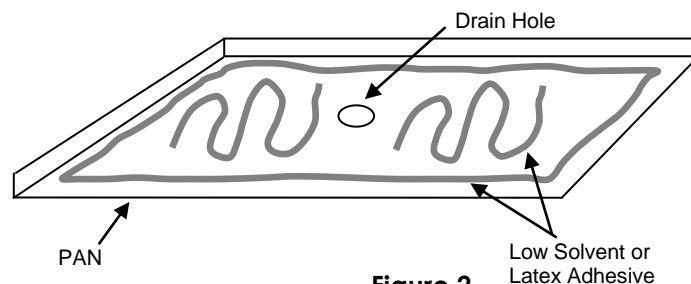


Figure 2

Apply ABS weld onto the existing 2" drain pipe and place the drain pan assembly over the drain pipe and onto the floor. Press firmly in all areas to ensure the pan lies flat on the floor.

Using a latex caulk, seal all edges between the pan, floor, and wall.

Place the drain cover to the drain assembly.

**[Check out our other products at www.duraflexproducts.com](http://www.duraflexproducts.com)**

**For questions or installation assistance:**

DuraFlex 801.377.6887 or Fax 801.377.6891 Email: [info@duraflexproducts.com](mailto:info@duraflexproducts.com)